
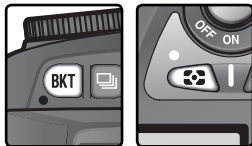 





 
Two-Button Reset

Restoring Default Settings

The camera settings listed below can be restored to default values by holding the **BKT** and  buttons down together for more than two seconds (these buttons are marked by a green dot). **Custom Settings are not affected.**



Option	Default
Shooting mode	Single frame*
Focus area	Center†
Metering	Matrix
Flexible program	Off
AE hold	Off‡
Exposure compensation	±0
Bracketing	Off

Option	Default
Flash sync mode	
P, S, A, M	Front-curtain sync
  	Auto front-curtain sync
	Auto slow sync
Flash compensation	Off
FV lock	Off‡
LCD illuminator	Off

* Shooting mode is not reset in self-timer and remote modes.

† Not reset when **Closest subject** is selected for Custom Setting 3 (**AF-area mode**).

‡ Custom Setting 15 (**AE-L/AF-L**) is unaffected.

The following shooting-menu options will also be reset.

Option	Default
Image quality	JPEG Normal
Image size	L
White bal.	Auto*

Option	Default
ISO	200
Optimize image	Normal

 
 
* Fine tuning reset to 0.

R—Menu Reset 136

Custom Settings can be reset to default values by selecting **Reset** for Custom Setting **R (Menu reset)**.


The HELP Button

To view help on Custom Settings, press the **?** (HELP) button when an item is highlighted in the CSM menu or when the options for a Custom Setting are displayed.

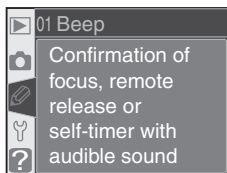

Custom Setting R: Menu Reset

 To restore Custom Settings to default values, highlight **Menu reset** in the CSM menu (**?** 135) and press the multi selector to the right. Press the multi selector up or down to highlight an option, then press to the right to make a selection.

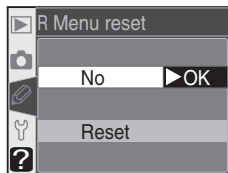

Option	Description
No (default)	Exit menu, leaving settings unchanged.
Reset	Restore settings to default values.

Two-Button Reset

Custom Settings are not reset when a two-button reset is performed (**?** 111).