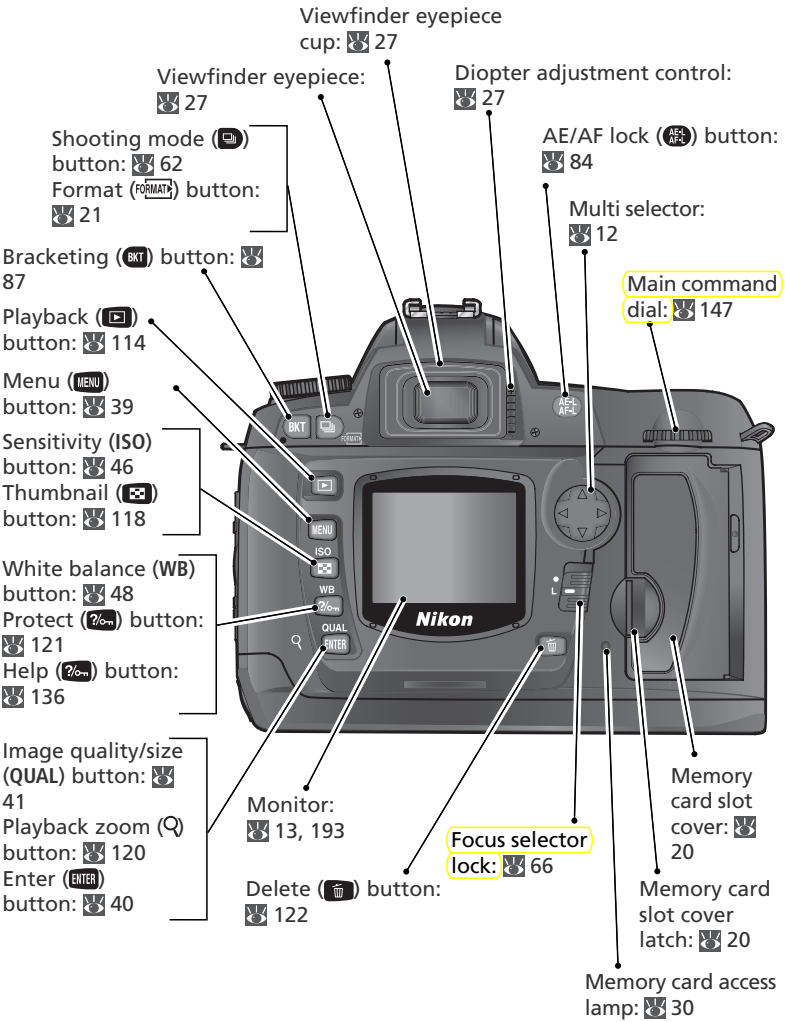
Viewfinder eyepiece cup: 27
Viewfinder eyepiece: 27
Diopter adjustment control: 27
Shooting mode button: 62
Format button: 21
AE/AF lock button: 84
Multi selector: 12
Bracketing button: 87
Main command dial: 147
Playback button: 114
Menu button: 39
Sensitivity (ISO) button: 46
Thumbnail button: 118
White balance (WB) button: 48
Protect button: 121
Help button: 136
Image quality/size (QUAL) button: 41
Playback zoom button: 120
Enter button: 40
Monitor: 13, 193
Delete button: 122
Focus selector lock: 66
Memory card slot cover: 20
Memory card slot cover latch: 20
Memory card access lamp: 30
BKT
FORMAT
MENU
ISO
WB
QUAL
ENTER
AE-L
AF-L
Nikon