



Viewfinder Focus

The viewfinder is equipped with diopter adjustment to accommodate individual differences in vision. To adjust viewfinder focus, slide the diopter adjustment control up and down until the viewfinder display and focus brackets are in sharp focus. If necessary, the rubber eyepiece cup can be removed; when the cup is replaced, the lettered face should be down.

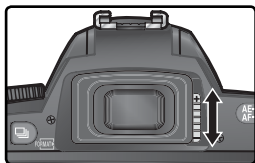

When operating the diopter adjustment control with your eye to the viewfinder, be careful not to put your fingers or fingernails in your eye.

Diopter can be adjusted in the range -1.6 m^{-1} to $+0.5\text{ m}^{-1}$. Corrective lenses (available separately;  190) allow diopters of -5 m^{-1} to $+3\text{ m}^{-1}$.